



Cord Cordless Iron

Model # ST-2000N

Operating Instructions



READ ALL INSTRUCTIONS CAREFULLY BEFORE USING THE IRON

SAFE USE OF THE IRON

When using your iron, basic safety precautions should always be followed:

1. Before using your appliance check and ensure that the voltage of the power socket is the same as the rating marked on the iron.
2. Remove any stickers or protective foil from the soleplate.
3. Before use, unwind the cord completely.
4. Use the iron for its intended use as stated in the instruction manual.
5. Do not place the iron on any other surface other than an ironing board during operating or on the stand provided with this model.
6. Never allow the cord to hang over the work surface.
7. When ironing different material, always start with the lowest temperature first.
8. To protect against the risk of electric shock, do not immerse the appliance in water or any other liquid.
9. Do not allow cord to touch hot surfaces or to come into contact with the heated soleplate to avoid cord damage.
10. Do not operate iron if it malfunctions, or if the cord, plug, or the iron itself has been dropped or damaged.
11. Always disconnect the iron from the outlet when filling or emptying the water tank.
12. Do not leave the iron unattended (even for a short time) whilst plugged in or on an ironing board. Disconnect the iron from outlet when not in use.
13. Close supervision is necessary when any appliance is used near children. Never allow a child to use this product.

SAFE USE OF THE IRON CONT.

14. Although the power plug has been disconnected, the remaining temperature can produce steam. After using the appliance, put iron in a place where children cannot reach. Empty the remaining water from the water tank and store it only when iron is completely cooled (about half hour after the iron is unplugged).
15. The iron's soleplate can become extremely hot and may cause burns if touched. Be cautious when turning iron upside down; there may be hot water in the water tank. Burns can occur from contact with hot water or steam. Keep ejecting steam away from the body.
16. Never yank the power cord to disconnect, instead, grasp plug and pull to disconnect.
17. Never wrap the cord around the appliance as this can damage the cord. When storing the iron, fold the cord neatly to avoid placing stress on the cord.

COMPONENTS IDENTIFICATION



Pilot Light

Water Tank

Soleplate

Spray Nozzle

Water Filling Inlet With Cap

Steam Control (variable)

Spray Button

Steam Burst Button

Temperature Control Dial

Locking Stand

3-Position Switch

Cordless Ironing

Locked Position

Corded Ironing

Power Cord Protector

Power Unit

Soft Touch Grip

HOW TO USE YOUR IRON

Note* It is normal for a small amount of smoke to be produced the first time, this will quickly disappear.

When using the steam function for the first time, do not direct the steam toward the laundry, as there could be debris from the steam vents.

- Pull out the bracket from the locking stand and fix it on the ironing board.
- Set the iron on the stand and plug it into the outlet.

Filling the water tank:

- a) Remove the plug from the outlet and set the variable steam control to the “0” (no steam) position.
- b) Set the 3-position switch to (1) and remove the cordless iron from the stand.
- c) Fill measuring cup with water.

If the water is very hard, it is advised to use distilled water.

- d) Open the inlet cap and fill water tank with prepared water to the maximum capacity. Do not fill over the indicated max line. After filling, slide the cap back.
- e) Pour out the remaining water after use.



SETTING TEMPERATURE:

Follow the ironing instructions on the garment label. If there are no instructions and you know what kind of fabric your garment is, consult the following table:


SYNTHETICS	SILK WOOL	LINEN COTTON
Synthetiques	Sole/lanie	Toile/cotton
Chemiefasern	Seide/wolle	Leinen/baumwolle

Note: If the fabric consists of various kinds of fabrics, always select the temperature required by the most delicate fabric.

CORDED OR CORDLESS USE

CORDED IRONING:

- Set the 3-position switch to position (3).
- Take the iron (with the power unit) from the stand.
- Always replace the iron (with the power unit) on the stand during ironing intervals.

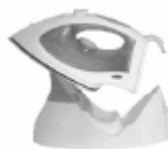

CORDLESS IRONING:

- Set the 3-position switch to position (1).
- Take the iron (without the power unit) from the stand.
- Always replace the iron on the stand during ironing intervals.
- When the iron is correctly placed on the stand, the pilot light will turn on.
- If the soleplate needs to heat up to its set temperature, the pilot light will turn on. As soon as the soleplate has regained the set temperature, the light will turn off.



Note: If you intend to steam iron for a long time period, it is advisable to use the iron in the corded position, since frequent shots of steam can cause the soleplate to cool down.

DRY IRONING

- Make sure the steam control is set to position “0” (no steam) and proceed to “Steam Ironing”.
- Any temperature may be used depending on the garment.
- You do not need to put water in the water tank when dry ironing only.
- The spray button may be used while dry ironing if there is water in the water tank.

STEAM IRONING

- Fill the iron with water as described above (“Filling the water tank”) and insert the plug into the outlet.
- Set the iron on the stand and allow the iron to heat for 2 minutes.

Note: For the first time use, allow the pilot light to turn on and off 3 consecutive times before ironing.

- The steam output can be varied from low to high by moving the steam control
- After using for about 40 seconds, turn the steam control to OFF. Put the iron on the stand until the pilot light (turns off. You can now steam iron again.
- The steam feature is only possible when setting the iron to high ironing temperatures.

SPRAYING

Press the spray button and aim the spray nozzle at stubborn creases. When using the water spray, it may be necessary to push the spray button a few times to get the spray pump geared to use.

STEAM BURST

- Make sure the steam control is set to position “0” (no steam).
- Press the steam burst button to release an intense shot of steam from the soleplate to remove stubborn creases in heavy materials.
- After using for about 25 seconds, put the iron on the stand until the pilot light turns off. You can now steam burst again.
- The steam feature is only possible when setting the iron to high ironing temperatures.
- Do not use the steam burst feature at a temperature below the steam range shown on the temperature control dial.

Note* For best steam quality, do not operate the steam burst button more than 3 times in a row.

ANTI DRIP SYSTEM

This iron is equipped with a drip stop function; the iron will automatically stop steaming when the temperature is too low to prevent water from dripping out of the soleplate. With the anti-dripping system, you can iron even the most delicate fabrics.

CLEANING AND STORAGE

After using, open the water filling inlet cap and hold the iron downwards to empty the remaining water from the water tank. Put the iron on the power base and set the temperature control dial to “MAX” for about 1-2 minutes to evaporate remaining water. Unplug the iron and let it cool down before storing.

In case of any repairs, replacement of cord or plug, or adjustment, please consult a qualified technician or take the appliance to an authorized service facility.

1 Year Limited Warranty

Smartek warrants this product free from defects in material and workmanship for 1 year from date of purchase.

Within this warranty period, Steam-X will repair or replace, at its option, defective parts at no charge, provided the product is returned freight prepaid with proof of purchase. Allow 2-4 weeks for return shipping.

This warranty does not cover improper installation, misuse, abuse or neglect on part of the owner. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.



Distributed By
Smartek USA Inc.,
Brooklyn, NY 11206
www.smartekusa.com