



**Easy-Grip
Handheld Travel Steamer**
Model Nos. SB51W, SB51B, SB51R



Read all instructions carefully before using this item.
Keep this manual for future reference.

SMT081313

Operation Instructions

STOP:

Read all instructions carefully before using this item.

FILLING STEAMER WITH WATER:

1. Place the steamer on a flat, level surface.
2. Fill the water reservoir with a measuring cup.
3. Never fill the water past MAX.
4. Place cap back on water reservoir.

Distilled water prevents material build-up.

WARNINGS:

1. Never fill the water reservoir when the power cord is plugged in.
2. Allow the appliance to cool for at least 5 minutes after it has been used.
3. Never add cold water to hot water. Steam may shoot out of the filling hole and cause injuries. Always let the appliance cool before adding water.

Steaming Fabrics and Linens

NOTE: The water reservoir must be filled and supplied cap attached securely before proceeding with the following steps.

1. Plug the steamer power cord into an electrical outlet. The heat indicator light will illuminate when turned ON.
2. Direct the steam nozzle towards the material you wish to steam.
3. Keep the flow of steam focused on the material. Using a slight back and forth motion will further enhance the steaming process.

CAUTION: Never point the steam nozzle towards your body, other people, pets or plants.

Steaming Garments

1. Place the garment on a clean hanger.
2. Begin steaming slowly from the bottom to the top of the garment. The steam will rise along the inside and outside of the fabric, removing the wrinkles.
3. Periodically point the steamer away from the garment and smooth the fabric with your free hand.
4. Repeat the above steps as necessary until garment is free of wrinkles.

Steaming Tips

1. Steaming on both sides of the fabric will help to remove stubborn wrinkles.
2. Delicate fabrics need to be steamed carefully to avoid damage caused by water spotting.
3. Drapery and curtains can be steamed while still hanging.
4. Caution should be taken while using a ladder or step ladder. Do not use a stool, chair or revolving chair.
5. To steam towels, handkerchiefs & napkins, hang them over a rod or towel holder.

Handling & Storing

1. Use distilled water to avoid material build-up.
(To remove mineral build-up; make sure that the steam holes on the cap are not clogged. Use a pin or any sort of thin pointed object which can fit thru the hole to remove the build-up.)
2. Remove all accessories from the steamer.
3. Empty any remaining water into a sink to minimize mineral build-up.
4. Reattach the water reservoir cap. Do not over tighten.
5. It is recommended to store the steamer and any supplied accessories together in the original packaging.
6. Store the steamer in a cool, dry place.

When using your appliance, basic safety precautions should always be taken. Read all instructions before use. Save this user manual for further reference.

Safety Instructions

1. Please keep out of reach of children.
2. Do not operate any appliance with a damaged cord, plug or steam hose.
3. Do not operate any appliance after it has been dropped, damaged or malfunctioned in any way.

Safety Instructions (continued)

4. Do not disassemble or try to repair the appliance.
To avoid electric shock, do not immerse the appliance in water or any other liquid.
5. To reduce the risk of contact with hot water emitting from steam vents, check the appliance before each use by holding it away from your body.
6. Use this appliance only in an up or down vertical motion.
7. Never use steam head in a horizontal position or tilt into a backward position as this may result in a hot water spill. Let the appliance cool completely before storing.
8. Burns may occur from touching hot parts, hot water or steam. Use care when emptying a steamer appliance as hot water may still be in the reservoir.
9. Do not direct steam onto people or animals.
10. Do not steam garments while they are being worn.
11. Nozzle and attachments become hot during use. To avoid injuries and burn, DO NOT touch the steam nozzle or water reservoir while the appliance is in use.
12. DO NOT change attachment while the appliance is plugged in or emitting steam.
13. Always disconnect the appliance from any electrical outlet when adding or changing attachments, filling with water, emptying the water or when not in use.
14. The use of accessory attachments other than those supplied with the appliance is not recommended and may result in fire, electric shock or personal injury.

Safety Instructions (continued)

15. If an extension cord is being used, the marked electrical rating should be at least as high as the electrical rating of the appliance. Cords rated for less amperage may overheat.
16. Care should be taken when using the extension cord so that it cannot be pulled or tripped over.

Troubleshooting

Problem	Possible Cause	Solution
No light on the switch.	The steamer is not plugged in.	Plug the steamer power cord into an electrical outlet.
	The household circuit breaker has been tripped; there is a blown fuse in the electrical circuit.	Reset the household circuit breaker or replace the blown fuse. Contact an electrician or your area's electrical provider.
The steamer heats up but there is no steam.	The water reservoir is empty.	Refill the water reservoir.
	There is a mineral build-up in the steamer.	Remove the mineral build-up.
The steamer flow light is flashing.	There is a mineral build-up in the steamer.	It is normal for the flow of the steam to stop for a few seconds. If it stays off for longer periods, check for mineral build-up.

1 Year Limited Warranty

The Sunbeam™ Easy-Grip Handheld Travel Steamer is warranted for 1 year from provable date of purchase against defects in material and workmanship.

During this period such defects will be repaired, or the product will be replaced without charge.

This warranty does not cover damage caused by misuse, negligence or improper installation. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

TO CLAIM

Send your package postage prepaid with a copy of your proof of purchase. You will also need to enclose a letter explaining the nature of your difficulty in detail. Please allow 2-4 weeks for return shipping.

Smartek USA Inc.

49 Bartlett Street Brooklyn, NY 11206

1-877-678-6232

***Sunbeam™ is a trademark of Sunbeam Products, Inc.
used under license.***