 




eureka[®]

VOYAGE™ STEAMER
INSTRUCTIONS MANUAL



Cautions for the first use


Remember, safety should be your first priority.

1. Never fill the water reservoir when the power cord is plugged in.
2. Allow the appliance to cool for at least 5 minutes after it has been used.
3. Do not place on unstable surfaces such as cushions while using the steamer.
4. Do not place steamer close to walls and furniture, as steam may cause discoloration and warping.
5. Never add cold water to hot water; steam may shoot out of the filling hole and cause injuries. Always let the appliance cool before adding water.

Safety Instructions

1. Whenever you need to step away from the steamer, make sure that you unplug it and leave the steamer in a vertical position.
2. Please keep out of reach of children.
3. **DO NOT** operate steamer if it has been dropped, damaged or has malfunctions in any way.
4. **CAUTION!** Make sure your steamer is disconnected from the power supply before pouring water into the tank.
5. **DO NOT** immerse any part of the steamer in any type of liquid.
6. **DO NOT** use the steamer if the cord is damaged. Consult with the manufacturer to get your steamer fixed or replaced.
(See last page for instructions)
7. To prevent deposition of minerals in the steam holes, it is recommended to use distilled water for cleaner steam holes.
8. Never use chemically descaled water.
9. Avoid directing steam towards people or animals. Steam is hazardous and can cause severe skin burns.

Parts & Features

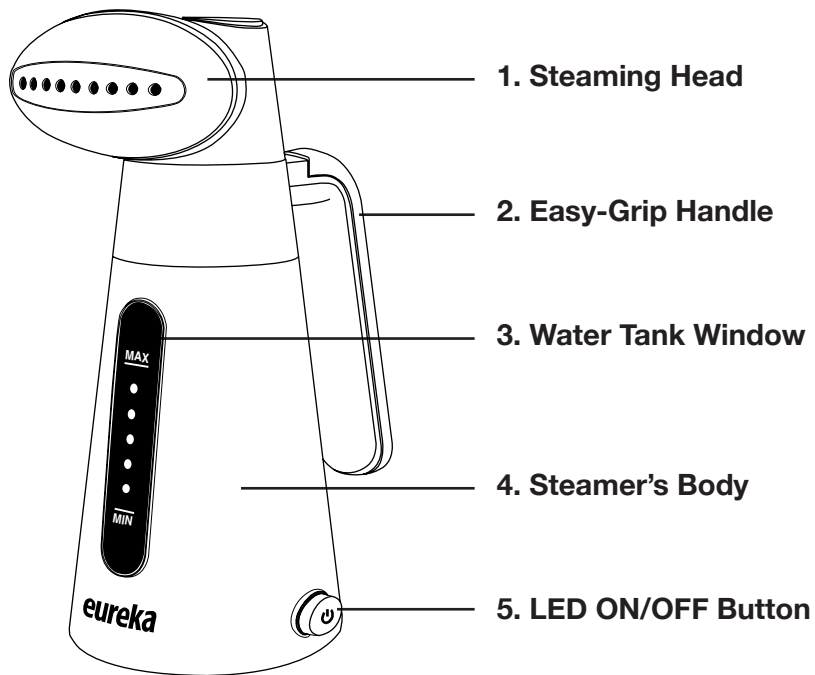

Filling with Water

1. Before filling the water tank, make sure the steamer is unplugged and held straight or placed on a flat level surface.
2. Open up the water tank by turning the steaming head to the Left and add cold clean water by using the measuring cup. Carefully monitor the water tank level during this process to prevent overfilling.
3. Never fill the water tank past the **MAX** line.
4. Place steaming head back on and turn to the Right to close.

Steaming

1. Fill the water tank in accordance with the “Filling with Water” instructions.
2. Plug the cord into the outlet.
3. By pressing the **ON/OFF** button, the steamer will automatically start heating up to an adequate and optimal steaming temperature.
4. The light “**ON**” indicates that the steamer’s heating system is currently working and maintaining an optimal steaming temperature.
5. Place the garment on a clean hanger.
6. Begin steaming slowly from the bottom to the top of the garment. The steam will rise along the inside and outside of the fabric, removing wrinkles (**ONLY** steam with vertical movements, **NOT** from side to side)
7. Periodically point the steamer away from the garment and smooth the fabric with your free hand.
8. Repeat steps 6-7 as necessary until garment is free of wrinkles.
9. When done steaming, press the **On/Off** button, unplug and allow the steamer to cool before putting steamer away.

Steaming Tips

1. Steaming on both sides of the fabric will help to remove stubborn wrinkles.
2. Delicate fabrics need to be steamed carefully to avoid damage by water spotting.
3. Drapery and curtains can be steamed while still hanging.
4. Caution should be taken while using a ladder or step ladder.
DO NOT use a stool, chair or revolving chair.
5. To steam towels, handkerchiefs and napkins, hang them over a rod or towel holder.

Handling & Storing

1. Use distilled water to avoid material build-up.
2. Empty any remaining water into a sink to minimize mineral build-up.
3. Store the steamer in a cool, dry place.

Troubleshooting

Problem	Possible Reasons	Solution
No light on the switch	The steamer is not plugged in	Plug the steamer power cord into an electrical outlet
	The household circuit breaker has been tripped; there is a blown fuse in the electrical circuit.	Reset the household circuit breaker or replace the blown fuse. Contact an electrician or your area's electric provider.
Steamer heats up but there is no steam	The water reservoir is empty	Refill the water reservoir
	There is a mineral build-up in the steamer	To remove mineral build-up make sure that the steam holes on the cap are not clogged. Use a pin or any sort of thin pointed object which can fit through the hole to remove the build-up.
Water sprays out from the steamer's head	The water tank is overloaded	Release some water from the tank until the water level is below or at the MAX level

Warranty

This product has a warranty for 1 year from provable date of purchase against defects in material and workmanship. During this period such defects will be repaired, or the product will be replaced at no charge. This warranty does not cover damage caused by misuse, negligence, or improper installation. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

TO CLAIM:

Purchaser must receive a Return Authorization Number by calling our service center at 1-844-EUREKA5 (844-387-3525) or visit our website www.eurekagarmentcare.net for more info. Once your return has been authorized, please send your package, prepaid postage, with a copy of your proof of purchase. You will also need to enclose a letter explaining the nature of your difficulty in detail. Please allow 2-4 weeks for return shipping.

Smartek USA Inc.
12 Hinsdale Street, NY 11207

Eureka is a registered trademark used under license from Electrolux Home Products Inc. Designed in USA.
Assembled in China. © 2017

**MORE
GREAT
EUREKA
PRODUCTS**

eureka®



**BLAZE ORIGINAL
1800**
(MODEL: ERB18003A,
ERB18003P)



BLAZE LCD
(MODEL: ERB18001P,
ERB18001R)



BLAZE PLUS
(MODEL: ERB18002G)



RAZOR
(MODEL: ER15002M,
ER15002A)



CHAMPION
(MODEL: ER15001P,
ER15001G, ER15001B)



PRO BULLET
(MODEL: ERP18001S,
ERP18001B)



VOYAGE
(MODEL: ERV6001P)

eureka[®]



 
**3-SILICONE
THIMBLES**
(MODEL: ER1003)



**HEAT RESISTANT
3-FINGER GLOVE**
(MODEL: ER1033)



**HEAT RESISTANT
IRONING GLOVE**
(MODEL: ER1035)

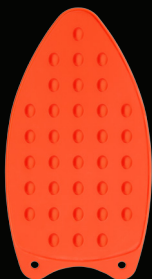

**SILICONE IRON
REST PAD**
(MODEL: ER1040)



 
**EXTRA LARGE PROTECTIVE
IRONING MESH**
(MODEL: ER1020)



**PROTECTIVE
IRON CASE**
(MODEL: ER1050)



**IRON & BOARD
HOLDER**
(MODEL: ER1010)

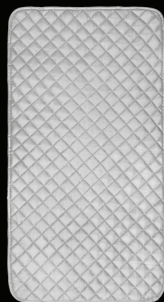

**SUPER MAGNETIC
IRONING MAT**
(MODEL: ER1025)

THANK YOU FOR PURCHASING *eureka* PRODUCTS

eureka[®]

FOR MORE INFO PLEASE VISIT: WWW.EUREKAGARMENTCARE.NET