



Deluxe Clothes Shaver
Operating Instructions
Model No. ST-25



Read all instructions carefully before using this item



CAUTION

- This device is equipped with sharp cutting blade, do not use it to shave your hair or skin to prevent cut and damage to your skin.
- Do not operate this device for more than 1 minute to prevent damage to the motor.
- Please tuck in exposed thread before you shave your woolen sweater or other fabrics to prevent damage to the fabrics.
- When the result of fabric regeneration cannot be pre-determined, you should shave the hidden or unexposed area first to determine the result before you shave the entire fabric.
- Do not use this device to shave easily damaged fabrics like Angolan. An intricate design or pattern on some fabrics may disappear during the process of shaving.
- Use only damp cloth to clean the surface; do not allow water or other liquids to enter the inner part of the device.-

SPECIAL FEATURES:

- After some period of use almost all fabrics will become full of lint, fuzz and pills caused by friction and pulled threads. They make your garments look old and difficult to clean. Smartek Deluxe Clothes Shaver can shave off these fuzz threads and pills easily.
- Even your favorite old garment may be revitalized to regain their new look forever.

HOW TO OPERATE:

- When battery power is in use, hold both sides of the removable fuzz bin at the bottom and slide it out. Open the cover of the battery compartment upwards and install 4C batteries and close the cover. Slide in the removable fuzz bin properly and turn the shaver on.
- When using AC adapter just plug in one end to the DC socket at the back of the device and the other end to an electrical outlet.
- Place the fabric you wish to renew on a flat surface, hold the device by its handle and gently move it over the fabric. Do not press heavily to prevent damage to the fabric.

HOW TO OPERATE:

- Pull the fabric as straight as possible to increase the efficiency of the device and the result of the fabric repair.
- It is recommended to put a small amount of lubricating oil on the inner side of the metal screen cover to allow maximum operation condition of this device.
- When the efficiency of the device becomes low, open the screen cover anti-clockwise then carefully take out the cutting blade, then clean the blade and also the inner compartment of the device using a soft brush. When you finished cleaning reinstall the blade and screen cover properly and then you could restart your shaver.
- After each use pull out the removable fuzz bin to clean.
- This device is equipped with safety equipment to stop the operation when the screen cover is loose or open.
- Remove the batteries from their compartments in case the device is not being used for a long period of time to prevent damage caused by battery leakage.

COMPONENTS IDENTIFICATION:



FEATURES:

- Removable Fuzz Bin
- Screen Cover
- On/Off Switch
- Handle

6 MONTH LIMITED WARRANTY:

This product has a warranty for 6 months from provable date of purchase against defects in material and workmanship.

During this period such defects will be repaired, or the product will be replaced without charge.

This warranty does not cover damage caused by misuse, negligence or improper installation. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

Send your package postage prepaid with a copy of your proof of purchase. You will also need to enclose a letter explaining the nature of your difficulty in detail. Please allow 2-4 weeks for return shipping.

Thank You for purchasing our Smartek Deluxe Clothes Shaver.

SPECIFICATIONS:

Power Source	120V
Power Consumption	5W, 4C Batteries
Rated Voltage	DC,6V
Rotation Speed	7000/Minute
Net Weight	455g,1 lb



Distributed By
Smartek USA Inc.
Brooklyn, NY 11206
www.smartekusa.com