



eureka[®]

BLAZE PLUS™
INSTRUCTIONS MANUAL

Cautions for the first use

Remember, safety should be your first priority.

1. Please make sure that you disconnect all other electronic devices connected to the power line you plan on using for your iron.
2. Make sure that you have removed any packaging or protective covers from the soleplate.
3. When plugged in for the first time, you may notice slight smoke due to production grease. Do not worry as this will cease shortly.
4. Always avoid harsh contact between your iron and other metal objects.

 
Safety Instructions

1. Whenever you need to step away from the iron, make sure that you unplug it and leave the iron in a vertical position with the soleplate facing upright.
2. Avoid children near the plugged iron.
3. Avoid contact of hot soleplate with your hands or flammable objects during use.
4. **CAUTION!** Make sure your iron is disconnected from the power supply before pouring water in the water tank.

Safety Instructions

1. Whenever you need to step away from the iron, make sure that you unplug it and leave the iron in a vertical position with the soleplate facing upright.
2. Avoid children near the plugged iron.
3. Avoid contact of hot soleplate with your hands or flammable objects during use.
4. **CAUTION!** Make sure your iron is disconnected from the power supply before pouring water in the water tank.
5. **DO NOT** immerse any part of the iron in any type of fluid.
6. **DO NOT** use the iron if the cord is damaged. Consult with the manufacturer to get your iron fixed or replaced.
(See last page for instructions)
7. To prevent deposition of minerals in the steam holes, it is recommended to use distilled water for cleaner steam holes.
8. Never use chemically descaled water.
9. Avoid directing steam towards people or animals. Steam is hazardous and can cause severe skin burns.

Parts & Features

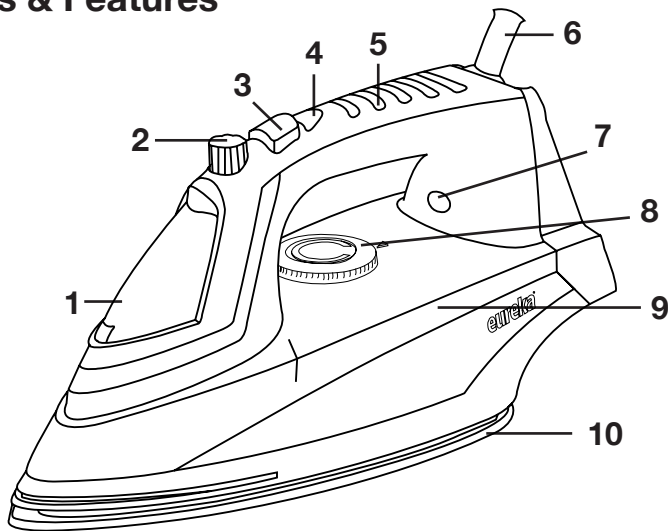

- 1. Water Filling Cover
- 2. Steam Control
- 3. Auto Surge™ Button
- 4. LED Indicator Pump Light & 3-Way Auto Shutoff Indicator Light
- 5. Gripsoft™ Rubberized Handle

- 6. 10 Foot Electrical Cord with 360° Pivot
- 7. Heating LED Indicator Light
- 8. Heat Settings Dial
- 9. Water Tank
- 10. Nano-Ceramic Shield™ Coated Soleplate

 
Dry Ironing

1. Set the movable Steam Control Lever to point “0”.
2. Adjust ironing temperature in accordance with the linen’s requirement.

Filling with Water

Before filling the water tank, make sure that the iron is unplugged, temperature dial is positioned at the “**OFF**” mark, and the iron is held at approximately 45° tilt. Now, fill the water tank till the **MAX** mark.


Steam Ironing

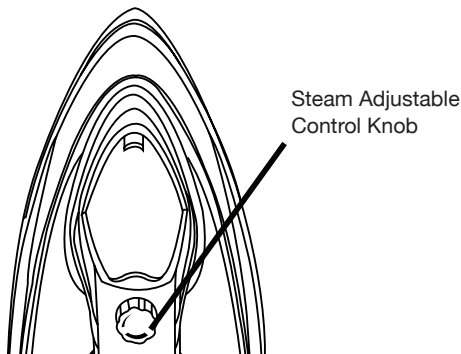

Auto Surge (Continuous Steam)

1. Fill the water tank in accordance with the instructions in the “Filling with Water” section.
2. Plug the cord into the outlet and ensure that the steam button is **OFF**.
3. Choose the fabric temperature desired.
4. The light “**ON**” indicates that the iron’s temperature is increasing steadily. Once desired temperature is reached, the light will turn “**OFF**” automatically. **DO NOT** press the steam button until the heating light is turned **OFF**.
5. The auto-surge button will emit a blue light to show that it is **OFF**.
6. According to your fabric’s requirement, adjust the Steam Adjustable Control knob by turning right for more steam and left for less steam.
7. Once you have chosen your desired temperature and steam setting, click the auto-surge button on your grip soft handle to activate the built-in pump that allows for continuous powerful bursts of steam. You may let go of the button once you have clicked it as one click is enough to activate continuous steam.
8. When continuous steam is automated, the auto-surge function light turns pink.
9. To turn **OFF**, simply click on the auto-surge button again.

 This function is specially designed to remove the toughest wrinkles and creases present in heavy fabrics. To achieve strongest steam discharge make sure that the thermostat dial is set at the **MAX** mark and that the steam surge knob is turned to **MAX**.

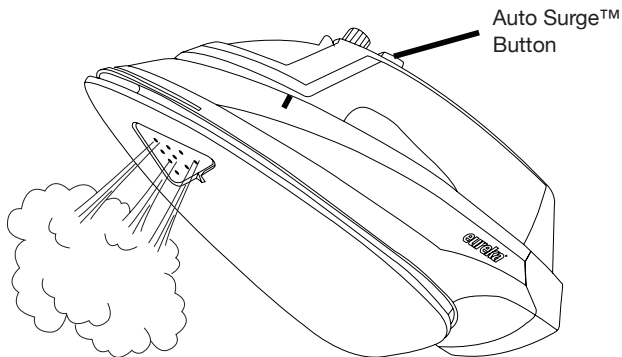

Vertical Steam

By holding the iron in a vertical position, one can apply continuous steam to remove creases from curtains and any type of hanging fabrics.

Anti-Drip

 
An advanced system inside your iron prevents water leakage at even the lowest heat setting.

Anti-Calc


Over time, lime scales may accumulate inside the iron or on the soleplate's surface. To prevent this, an anti-calc filter is permanently installed in this appliance. It cannot be removed for cleaning purposes.

Auto Shut-Off

1. If the iron is left unused for 15 minutes, the light will blink signaling that the iron has automatically shut off.
2. If the iron is left on the fabric or accidentally tips over, the iron will automatically shut off within 30 seconds. The blinking light on the iron will indicate that the iron has shut off. The steam function will not work until the iron has heated up again.
3. Move the iron back and forth on the linen to auto-restart. The light will immediately stop blinking after achieving sufficient temperature for you to continue ironing.

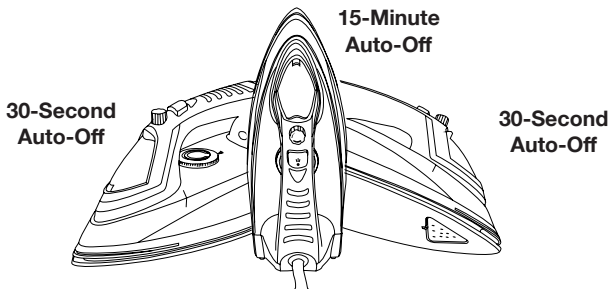

Heat Settings Dial

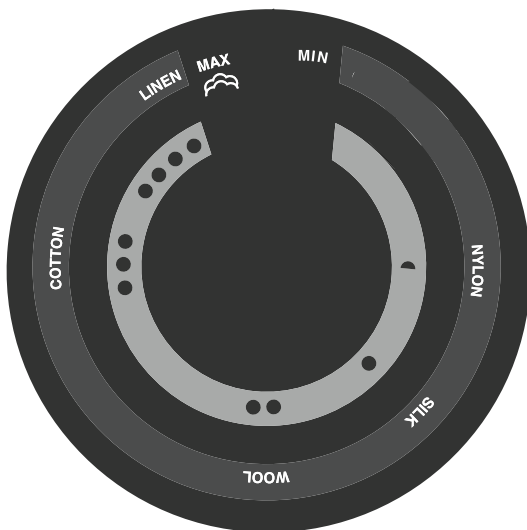 


Caution



Please note that this symbol on your fabric's label means this article may not ironed.

Heater cleaning

 1. Before cleaning the heater, unplug the cord, empty the water tank, and make sure you have given the soleplate enough time to cool down.
2. Carefully turn your iron over, and pry up the cover plate by smoothly inserting a small spread-eagled-screwdriver into the prying part of the cleaning hole. Make sure you only insert the screwdriver to a maximum length of 2mm so that you don't damage the seal during this process.
3. Unscrew the three screws of the heater filtering unit with a cross-shaped screwdriver.
4. Take off the heat filtering unit and use a Q-tip to clean it thoroughly.
5. After cleaning, reinstall the cover plate by inserting the two foot fasteners at the bottom first and then securely pressing the top for proper placement.

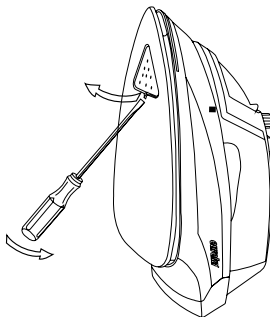

Cleaning & Maintenance

Before you begin cleaning, unplug the iron and allow it to cool down.

1. Clean the soleplate with any moist cloth and non-abrasive cleaner.
2. If fibers stick to the soleplate, use damp cloth immersed in vinegar to wipe off adherent fibers.
3. Never use strong acids and alkali fluids as cleaning agents when cleaning soleplate.
4. Use a toothpick to remove any scales stuck up in steam holes.
Make sure that you don't damage the soleplate in the process.
5. Remove any left over water from the water tank.
6. Make sure the steam selector is set to "0" and the thermostat dial is set to "OFF".

Troubleshooting

Problem	Possible Reasons	Solution
There is little heat or no heat.	Cord may be unplugged or thermostat improperly set.	Check thermostat dial and look for any error in power transmission.
Steam has stopped or there is leakage.	Thermostat dial is set at the OFF mark.	Adjust thermostat dial to your desired setting.
There is no flow of steam or vertical steam is absent.	Repeated usage of vertical burst of steam or the iron is not hot enough.	Give regular pauses between each vertical burst of steam and continue ironing in horizontal position.
There is water leaking from soleplate.	The iron is not hot enough.	Set the thermostat dial to a higher setting.
	The water is exceeding the MAX position mark.	Remove excess water.
Less Steam	Clogged steam holes.	Follow the "Heater Cleaning" instructions on the previous page.
	Steam control knob is not set to the proper position.	By turning to the right, adjust the steam control knob to the proper position.
	Not enough water in tank.	Fill the water level up to the MAX mark on the tank.

Warranty

This product has a warranty for 2 years from provable date of purchase against defects in material and workmanship. During this period such defects will be repaired, or the product will be replaced at no charge. This warranty does not cover damage caused by misuse, negligence, or improper installation. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

TO CLAIM:

Purchaser must receive a Return Authorization Number by calling our service center at 1-844-EUREKA5 (844-387-3525) or visit our website www.eurekagarmentcare.net for more info. Once your return has been authorized, please send your package, prepaid postage, with a copy of your proof of purchase. You will also need to enclose a letter explaining the nature of your difficulty in detail. Please allow 2-4 weeks for return shipping.

Smartek USA Inc.
12 Hinsdale Street, NY 11207

Eureka is a registered trademark used under license from Electrolux Home Products Inc. Designed in USA.
Assembled in China. © 2015

**MORE
GREAT
EUREKA
PRODUCTS**

eureka[®]



**HEAT RESISTANT
3-FINGER GLOVE**
(MODEL: ER1033)



**HEAT RESISTANT
IRONING GLOVE**
(MODEL: ER1035)



**PROTECTIVE
IRON CASE**
(MODEL: ER1050)



 
**EXTRA LARGE PROTECTIVE
IRONING MESH**
(MODEL: ER1020)



**SILICONE IRON
REST PAD**
(MODEL: ER1040)



**IRON & BOARD
HOLDER**
(MODEL: ER1010)

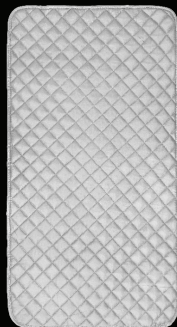

**SUPER MAGNETIC
IRONING MAT**
(MODEL: ER1025)

THANK YOU FOR PURCHASING *eureka* PRODUCTS

eureka®

FOR MORE INFO PLEASE VISIT: WWW.EUREKAGARMENTCARE.NET