


# Sunbeam<sup>TM</sup>

## Deluxe Fabric Shaver Operating Instructions

Model No. S20

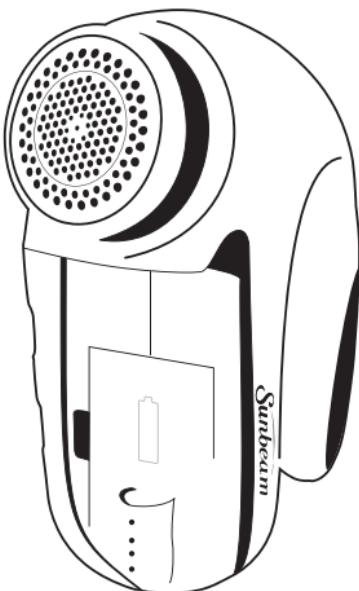


**Read all instructions carefully before using this item**

SMT 060910

## Components

1. On/Off Switch
2. Screen Cover
3. Removable Fuzz Bin
4. Handle
5. Battery Compartment
6. A/C Adapter

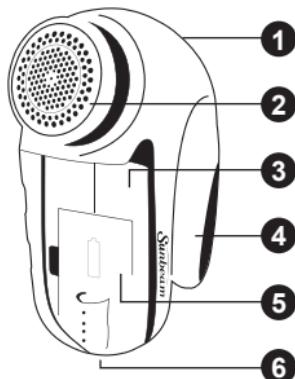

## Preparations for Use

**Please read all instructions carefully before use.**

The fabric shaver can be used with an AC adapter or with batteries.

1. To use with A/C adapter, plug one end into the DC socket on the shaver, and the other end into an outlet.
2. To use with batteries, grasp the two sides of the removable fuzz bin and pull downward. This will expose the battery compartment. Open the cover of the compartment and install 4 C batteries, as indicated.
3. Switch the shaver ON.

## Operating Instructions

- Place your fabric on a flat surface.

- Glide the shaver gently over the fabric in an up and down motion.
- To prevent possible damage, do not press down heavily.

## Care and Cleaning

- Empty the fuzz bin after each use.
- Use a damp cloth to wipe the surface of the shaver. Do not allow water to enter the inner parts.
- If the device will not be used for a long period of time, remove the batteries from their compartment.
- Place a small amount of lubricating oil on the inner side of the metal screen cover after several uses.
- If you notice a decrease in effectiveness of the shaver, remove the screen cover by turning it counter-clockwise, and carefully take out the cutting blade. Clean the blade and inner compartment with a soft brush. Then, reinstall the blade and tighten the screen cover. Important: Blades are sharp; please exercise caution.
- This device is equipped with a safety feature, which stops operation when the screen cover is loose or open.

## For Your Safety

- Use this device only as recommended in this manual.

- Do not use this device for delicate, easily damaged fabrics. If you are unsure of the fabric's suitability, try shaving an unexposed area first.
- Tuck in any loose threads before shaving.
- To prevent possible damage to the unit, do not leave it running when not in use.
- Do not leave the unit unattended, especially near children.

## 1 Year Limited Warranty

The Sunbeam™ Deluxe Fabric Shaver is warranted for 1 Year from provable date of purchase against defects in material and workmanship.

During this period such defects will be repaired, or the product will be replaced without charge.

This warranty does not cover damage caused by misuse, negligence or improper installation. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station.

Send your package postage prepaid with a copy of your proof of purchase. You will also need to enclose a letter explaining the nature of your difficulty in detail. Please allow 2-4 weeks for return shipping.

**Smartek USA Inc.**

**49 Bartlett Street Brooklyn, NY 11206**


**1-877-678-6232**

Sunbeam™ logo is a trademark of Sunbeam Products, Inc. used under license.



**Deluxe máquina de afeitar de Tela  
Instrucciones de Operación**


Modelo No. S20

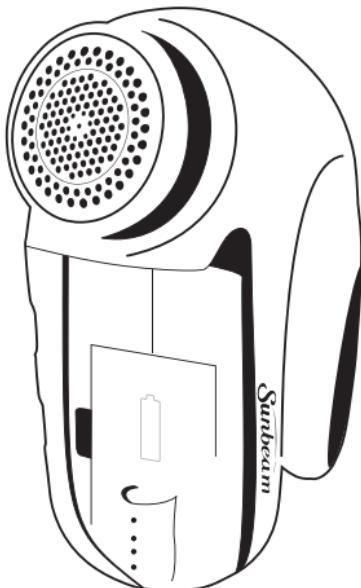

**Lea atentamente las instrucciones antes de usar este tema**

## Componentes

1. Encendido / Apagado
2. Pantalla de la cubierta
3. Bin pelusa extraíble
4. Manejar
5. Compartimiento de la Batería.
6. A / C Adapter

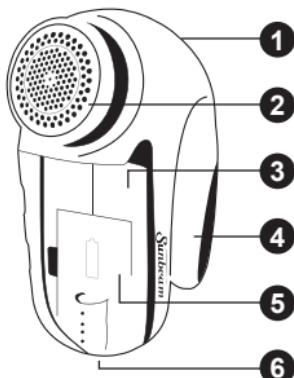

## Preparaciones para la alimentación

Por favor, lea atentamente todas las instrucciones antes de usar.

La afeitadora pelusa se puede utilizar con un adaptador de CA o con baterías.

1. Para el uso con el adaptador de CA, conecte un extremo en la toma de corriente en la máquina de afeitar, y el otro extremo a una toma.
2. Para el uso con pilas, sujeté los dos lados de la bandeja extraíble fuzz y tire hacia abajo. Esto expondrá el compartimiento de la batería. Abra la tapa del compartimento de las pilas e instale las 4 C, como se indica.
3. Cambiar la máquina de afeitar.

## Manual de instrucciones

- Coloque la tela sobre una superficie plana.
- Se desliza la máquina de afeitar suavemente sobre

la tela en un movimiento arriba y abajo.

- Para evitar posibles daños, no presione en exceso.

## Cuidado y limpieza

- Vacíe el depósito de pelusa después de cada uso.
- Utilice un paño húmedo para limpiar la superficie de la afeitadora. No permita que el agua entre en las partes internas.
- Si el dispositivo no será utilizado durante un largo periodo de tiempo, retire las pilas de su compartimento
- Coloque una pequeña cantidad de aceite lubricante en la parte interna de la pantalla cubierta de metal después de varios usos.
- Si usted nota una disminución de la eficacia de la afeitadora, retire la cubierta de la pantalla, girando en sentido contrario a las agujas del reloj, y con cuidado saque la cuchilla de corte. Limpie la cuchilla y el compartimiento interior con un cepillo suave. A continuación, vuelva a instalar la cuchilla y apretar la cubierta de pantalla.
- Este dispositivo está equipado con un dispositivo de seguridad, que la operación se detiene cuando la cubierta de la pantalla está suelto o abiertos.

## Para su seguridad

- Utilice este aparato sólo como se recomienda en este manual.

- No utilice este dispositivo para tejidos delicados, muy delicados. Si no está seguro de la idoneidad de la tela, trate de afeitar un área no expuesta en primer lugar.
- Tuck en cualquier hilo suelto antes de afeitarse.
- Para evitar posibles daños a la unidad, no, déjelo encendido cuando no esté en uso.
- No deje la unidad sin vigilancia, especialmente cerca de los niños.

## 1 AÑO LIMITO GARANTIA

El Sunbeam™ Barco de vapor de prenda de vestir es justificado durante 1 años de fecha demostrable de compra contra defectos en la materia y la habilidad.

Durante este período tales defectos serán reparados, o el producto será reemplazado sin carga.

Esta garantía no cubre daño causado por maltrato, la negligencia ni instalación impropia. La garantía es también inválida en cualquier caso que el producto es desarmado o es atendido a por una gasolinera no autorizada.

Envíe su franqueo de paquete pagado por adelantado con una copia de su comprobante de compra. Usted también deberá encerrar una carta que explica la naturaleza de su dificultad con todo detalle. Permita por favor 2-4 semanas para envío de regreso.

**Smartek USA Inc.  
49 Bartlett Street Brooklyn, NY 11206  
1-877-678-6232**

Sunbeam™ logo es una marca de Sunbeam Products, Inc. utilizó bajo la licencia.