



Lint Remover


Instructions for Use

1. Please read all instructions carefully before using this product.
2. Insert two AA batteries in the battery compartment. To open the compartment, press down on the arrow with your thumb and push in the direction of the arrow. Once batteries are inserted, replace battery cover by sliding it up and clicking into place.
3. Remove the plastic protective cover from the metal grid.
4. Place the article to be shaved on a flat surface, such as an ironing board.
5. Turn the switch to ON. Slide the lint remover over the article of clothing to get rid of pilling, fluff, and lint.

Cleaning and Maintenance

Lint and fluff will collect inside the see-through bin at the bottom of your lint remover. To clean, simply pull the lint bin to disconnect, and empty its contents. Click back into place when done.

To clean the inside of the metal grid, turn the grid counter-clockwise until released. Clean the blades with the small brush. Replace grid by turning it clockwise till tight. Important: Blades are sharp; please exercise caution.

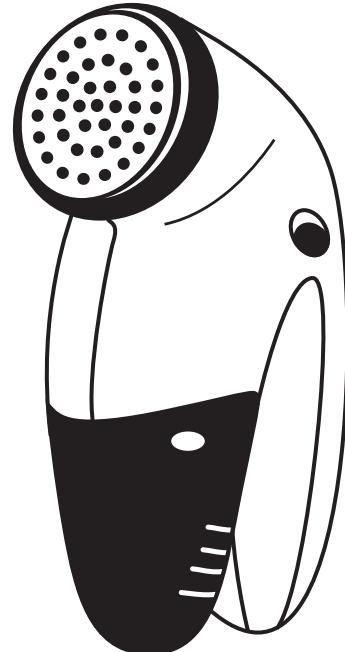

Precautions

1. Do not leave the lint remover unattended, particularly when used near children.
2. Do not use on very delicate clothing.
3. Do not clean with water or chemical solutions.

6 MONTH LIMITED WARRANTY

The Sunbeam™ Cloths Shaver is warranted for 6 months from provable date of purchase against defects in material and workmanship. During this period such defects will be repaired, or the product will be replaced without charge. This warranty does not cover damage caused by misuse, negligence or improper installation. Warranty is also invalid in any case that the product is taken apart or serviced by an unauthorized service station. Send your package postage prepaid with a copy of your proof of purchase. You will also need to enclose a letter explaining the nature of your difficulty in detail. Please allow 2-4 weeks for return shipping.

**Smartek USA Inc.
49 Bartlett Street Brooklyn, NY 11206
1-877-678-6232**


Sunbeam® logo is a registered trademark of Sunbeam Products, Inc. used under license by Smartek USA Inc.



Removedor de hilas

Las instrucciones para el Uso

1. Lea por favor todas instrucciones con cuidado antes de utilizar este producto.
2. Inserta dos baterías de AA en el compartimiento de batería. Para abrir el compartimiento, prensa hacia abajo en la flecha con el pulgar y el empujón hacia la flecha. Una vez que baterías son insertadas, reemplacen cobertura de batería deslizándolo arriba y hacer clic en en el lugar.
3. Quite la cobertura protectora plástica de la cuadrícula metálica.
4. Coloque el artículo para ser afeitado en una superficie plana, como una tabla de planchar.
5. Gira el interruptor a EN. Deslice el removedor de hilas sobre el artículo de ropa para deshacerse de pilling, de la pelusa, y de hilas.

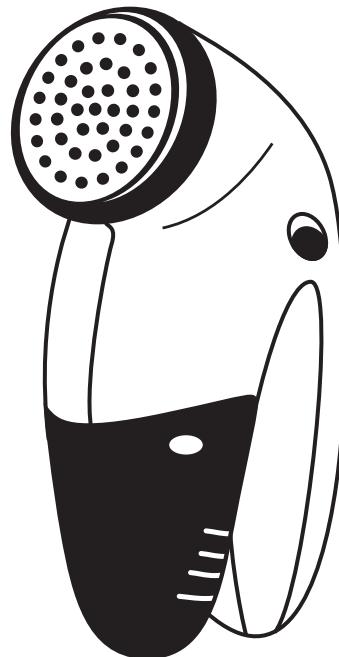

Limpiar y Mantenimiento

Hilas y pelusa reunirán dentro del cajón transparente en el fondo de su removedor de hilas. Para limpiar, jalar simplemente el cajón de hilas para desconectar, y para vaciar su contenido. Haga clic en atrás en lugar cuando hecho.

Para limpiar el dentro de la cuadrícula metálica, gira la cuadrícula a la izquierda hasta soltado. Limpie las hojas con el pequeño cepillo. Reemplace cuadrícula girándolo a la derecha hasta apretado. Importante: Las hojas son agudas; por favor cuidado de ejercicio.

Precautions'

1. No salga el removedor de hilas desatendido, especialmente cuando se usa cerca de niños.
2. No utilice en la ropa muy delicada.
3. No limpie con agua ni soluciones químicas.

6 MES LIMITO GARANTIA

Té Sunbeam™ es justificado por 6 meses de la fecha demostrable de compra contra defectos en la materia y la habilidad. Durante este período tales defectos serán reparados, o el producto será reemplazado sin carga. Esta garantía no cubre daño causado por maltrato, la negligencia ni instalación impropia. La garantía es también inválida en cualquier caso que el producto es desarmado o es atendido a por una gasolinera no autorizada, Envíe su franqueo de paquete pagado por adelantado con una copia de su comprobante de compra. Usted también deberá encerrar una carta que explica la naturaleza de su dificultad con todo detalle. Permita por favor 2-4 semanas para envío de regreso.

Smartek USA Inc.
49 Bartlett Street Brooklyn, NY 11206
1-877-678-6232